STEP 6

6.1 Attach Panel(E)to Panel(C), as shown in Picture 1.
6.2 Attach Panel(G)to Panel(E), as shown in Picture 2.

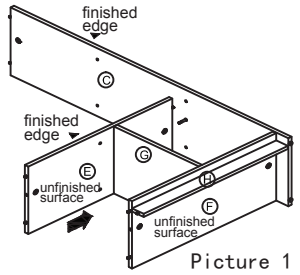

Picture 1

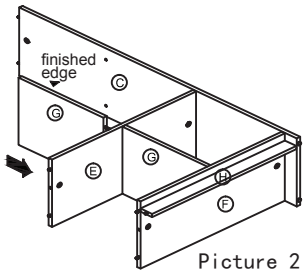

Picture 2

STEP 7

7.1 Attach Panel(E)to Panel(C), as shown in Picture 1.
7.2 Attach Panel(G)to Panel(D), as shown in Picture 2.

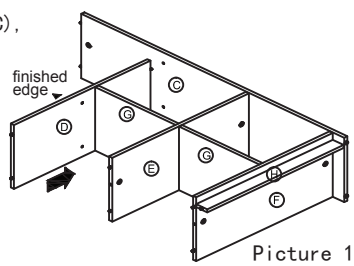

Picture 1

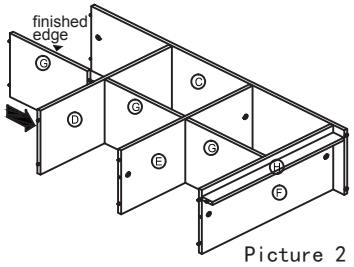

Picture 2

STEP 8

8.1 Attach Panel(B)to the unit, as shown.
8.2 Attach Panel(A)and lock all Cam-Lock Nut(2)using screwdriver.

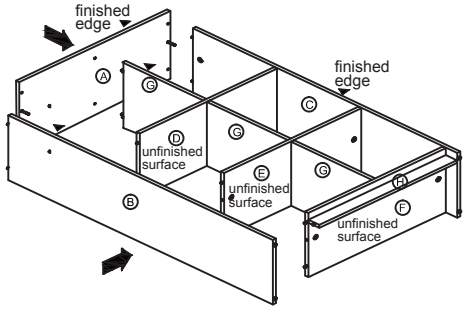

STEP 9

Attach Panel(H)to the back side using Power Pin(6)and Hammer.

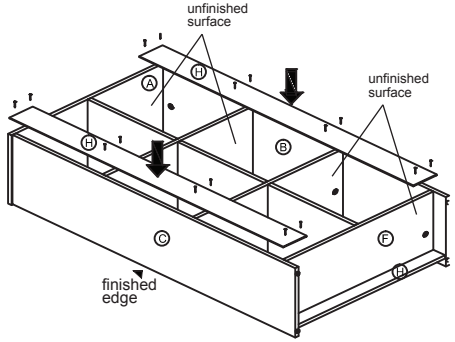

Recommended Maximum Weight

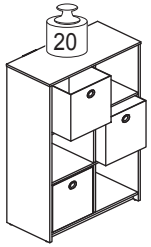

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.

Furinno®
Fits Space. Fits Budget

Assembly Instruction

Furinno Econ Storage Organizer Bookcase w/Bins

MODEL : **13087**
DIMENSION : 19.8”(W) x 36.5”(H) x 9.5”(D)

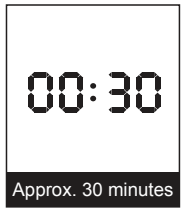

Approx. 30 minutes

Recomm. 1 Person

Tool Required

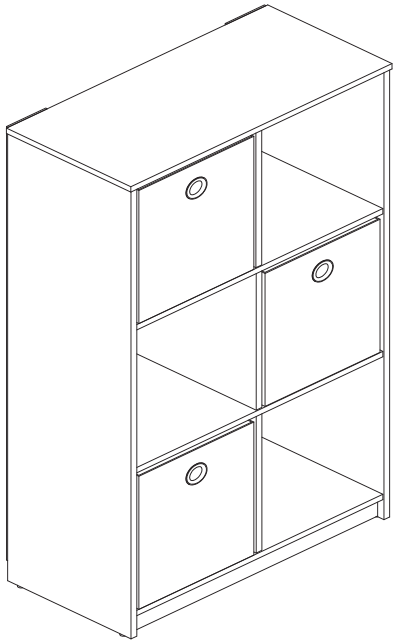

Customer Service
Tel/Fax: 281.500.9372
Toll Free: 773.299.8111 (Mon - Fri 9am - 5pm)
Email: support@furinno.com

www.furinno.com Find us on Facebook Pinterest

No	Hardware List	Qty
1	Cam-Lock Screw	6pcs
2	Cam-Lock Nut	6pcs
3	Nail Leg	4pcs
4	Short Dowel	24pcs
5	Long Dowel	4pcs
6	Power Pin	16pcs

No	Parts List	Qty
A	Top Panel	1pcs
B	Left Side Panel	1pcs
C	Right Side Panel	1pcs
D	Top Shelf Panel	1pcs
E	Center Shelf Panel	1pcs
F	Bottom Panel	1pcs
G	Center Panel	3pcs
H	Bottom Bar	1pcs
I	Back Panel	2pcs

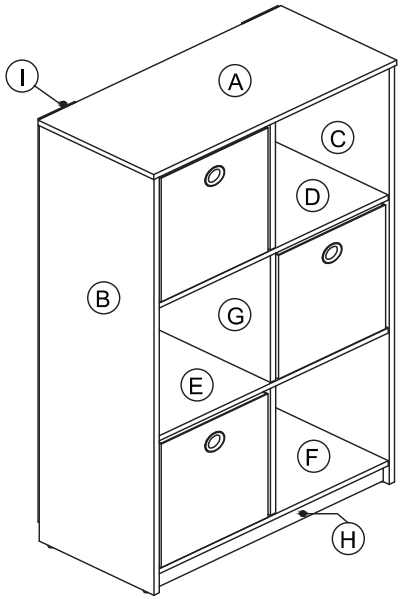

USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.

STEP 1

1.1 Install Cam-Lock Screw(1)to pre-drilled holes on Panel(A),(B)&(C)using screwdriver.
1.2 Install Cam-Lock Nut(2),Short Dowel(4)and Nail Leg(3)on Panel(B)&(C).

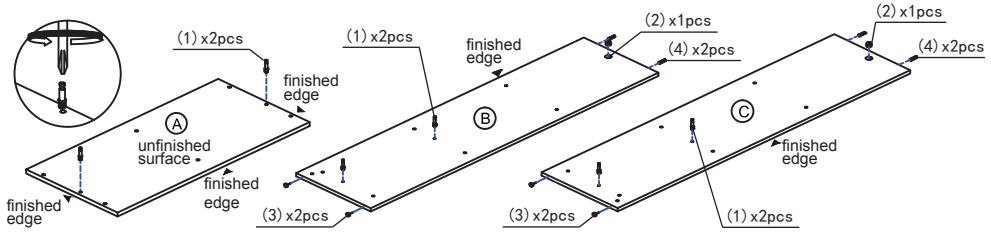

STEP 2

2.1 Install Short Dowel(4)to Panel(D),(H),(E),(F)&(G).
2.2 Install Cam-Lock Nut(2)on Panel(E)&(F).
2.3 Install Long Dowel(5)to all Panel(G).
Note: Arrow on Cam-Lock Nut(2)should be pointing outward.

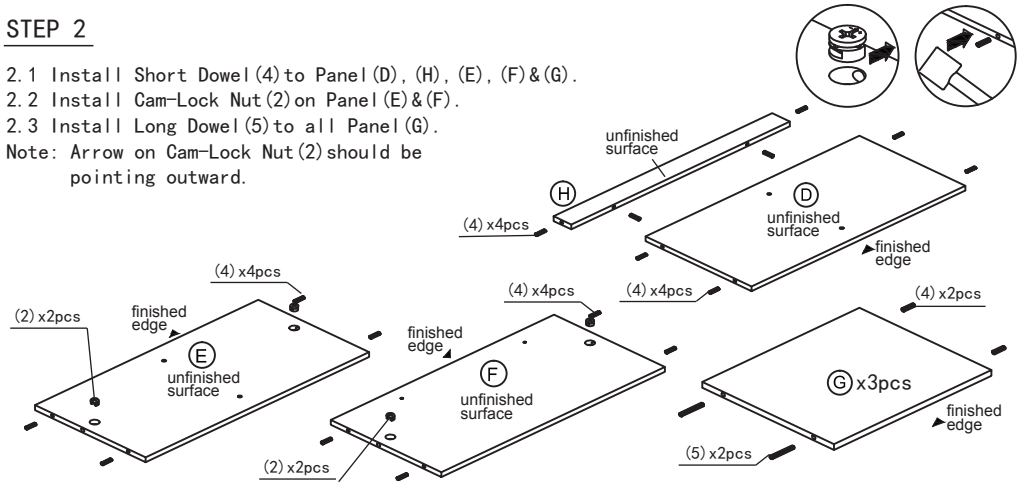

STEP 3

Attach Panel(H)to Panel(F), as shown.

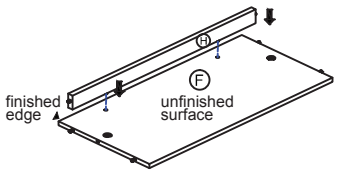

STEP 4

Attach Panel(C)to completed unit in Step 3 and lock Cam-Lock Nut(2)using screwdriver.

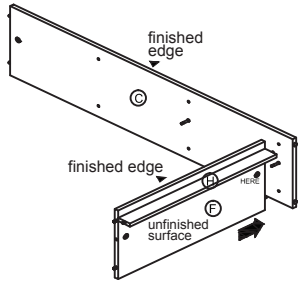

STEP 5
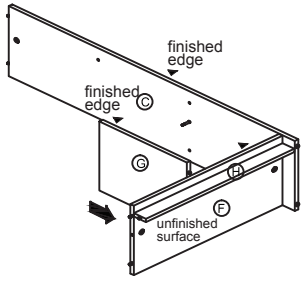
Attach Panel(G)to Panel(F), as shown.