



STEP 7

Attach Back Cover Panel (F) to L/R Side Panel (B, C).

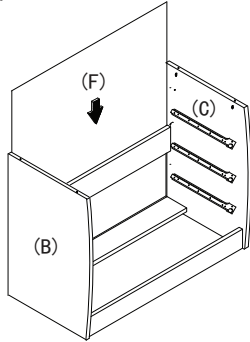


STEP 9

Fix Back Cover Panel (F) using Short Screw (2).

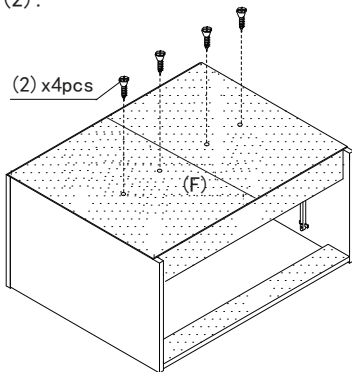


STEP 8

- 8.1 Insert Cam-Lock Screw (3) on Panel (A).
8.2 Attach Panel (A) to L/R Side Panel (B, C) with Cam-Long Screw/Nut (3).

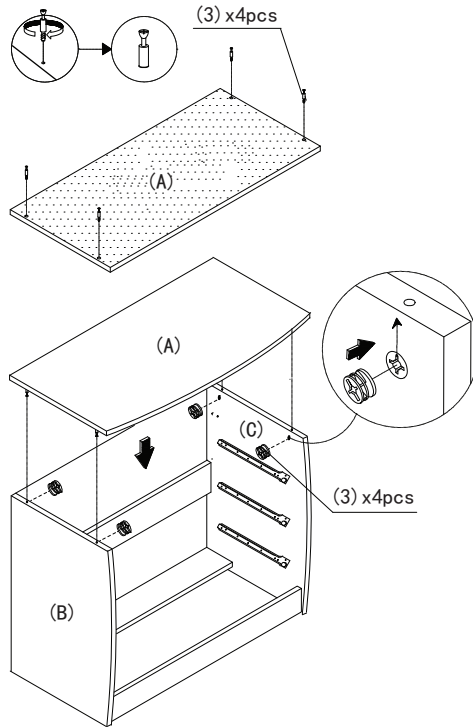

Recommended Maximum Weight

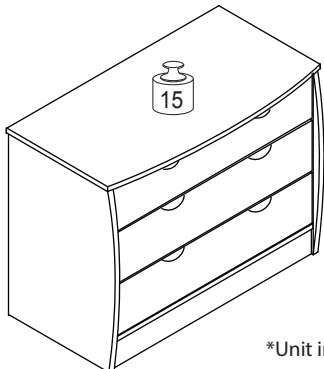

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.



Assembly Instruction

Furinno Simple Design Bedside
3-Drawer Chest

MODEL : **FNAK-11172**

DIMENSION : 29.5"(W) x 22.3"(H) x 15.8"(D)

00:30


Approx. 30 minutes



Recomm. 2 Person



Tool Required

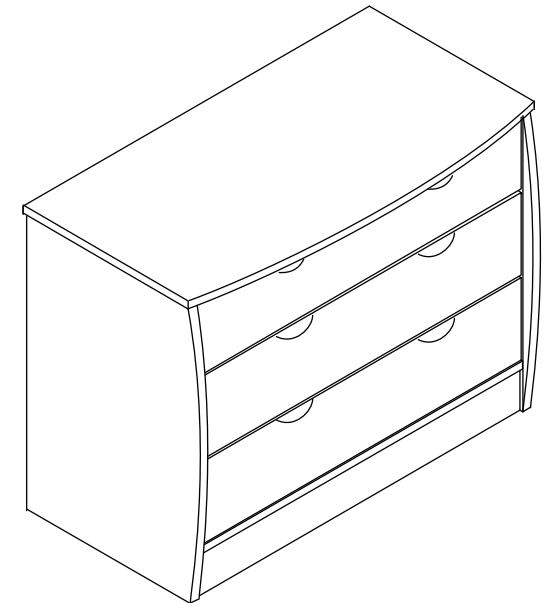

Customer Service

Tel/Fax: 281.500.9372





Toll Free: 773.299.8111 (Mon - Fri 9am - 5pm)













Email: support@furinno.com



www.furinno.com

 Find us on
Facebook



No	Hardware List	Qty
1	Long Screw 	12pcs
2	Short Screw 	28pcs
3	Cam-Lock Screw/Nut 	28pcs
4	Slider 	6pcs

No	Parts List	Qty
A	Top Panel 	1pcs
B	Left Side Panel 	1pcs
C	Right Side Panel 	1pcs
D	Front Support Panel 	1pcs
E	Back Bottom Panel 	1pcs
F	Back Cover Panel 	1pcs
G	Drawer Front Panel 	3pcs
H	Drawer Left Side Panel 	3pcs
I	Drawer Right Side Panel 	3pcs
J	Drawer Back Panel 	3pcs
K	Drawer Bottom Panel 	3pcs
L	Back Support Panel 	1pcs

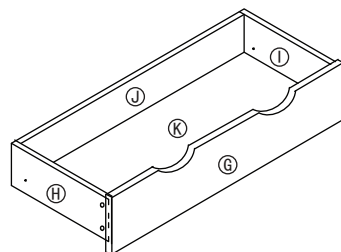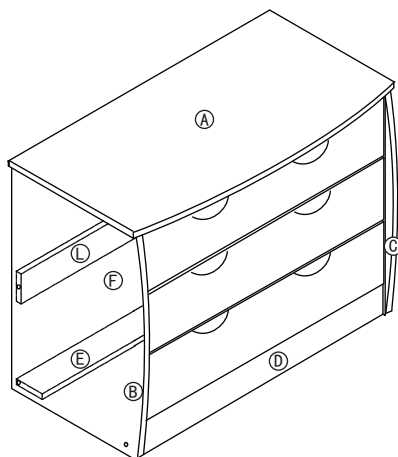


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.


STEP 1

Insert Cam-Lock Screw(3) into Drawer Front Panel (G).

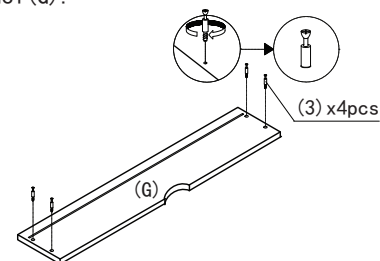


STEP 2

Attach Panel (J) to L/R Side Panel (H, I) using Long Screw (1).

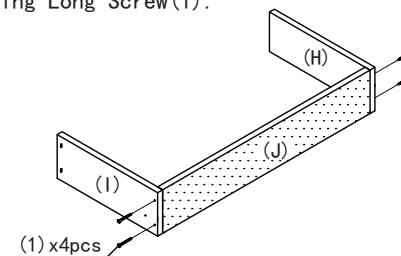


STEP 3

- 3.1 Slide Panel (K) into L/R Side Panel (H, I).
- 3.2 Attach Front Panel (G) to Panel (H, I) using Cam-Lock Screw/Nut (3).

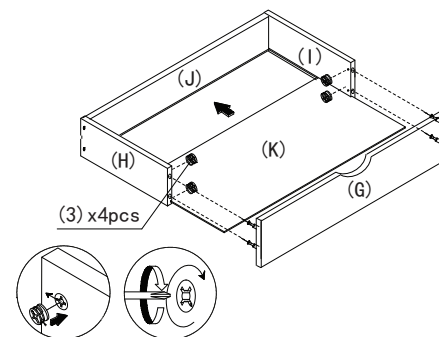


STEP 4

Attach Slider (4) at the bottom of L/R Side Panel (H, I) using Short Screw (2).
Note: Attach slider according to the side.

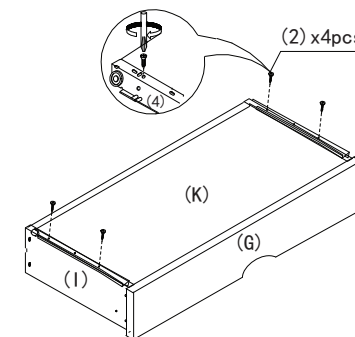

STEP 5

- 5.1 Attach Slider (4) on L/R Side Panel (B, C) using Short Screw (2), as shown.
- 5.2 Attach Cam-Lock Screw (3) on L/R Side Panel (B, C).

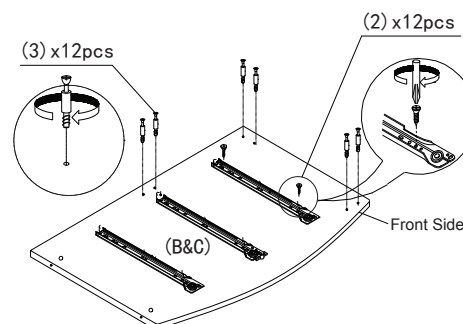

STEP 6

Attach Panel (D, E, L) to L/R Side Panel (B, C) using Cam-Lock Screw/Nut (3).

