



STEP 5

Attach Upper Shelf Panel (H), (I) using Screw (6).

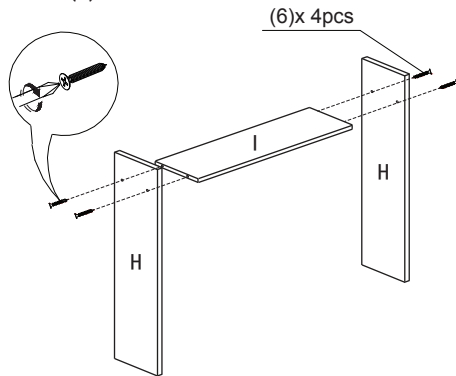


STEP 6

Attach Upper Panel (G), (K) with completed unit in Step 5 using Screw (6).

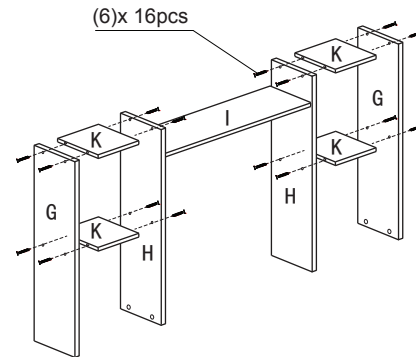


STEP 7

Attach both completed units in Step 6 and Step 4 using Cam-Lock Screw/Nut (3).

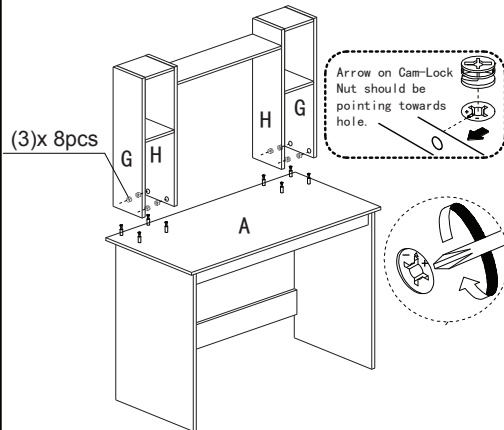


STEP 8

- 8.1 Insert Shelf Support (7) to Panel (H) and attach with Panel (J).
- 8.2 Cover Stickers (5) on Screw (6).

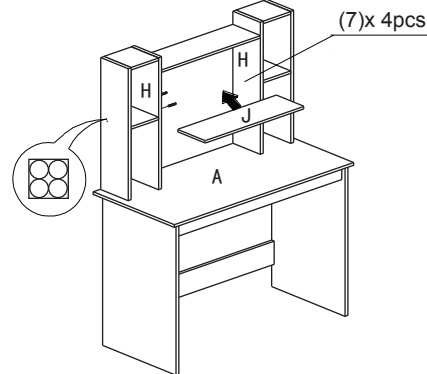

Recommended Maximum Weight

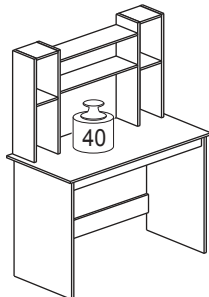

*Unit in Pound (lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.



Assembly Instruction

Furinno Botaye Computer Desk
w/Built-in Bookshelf

MODEL : **FNAL-11081**
DIMENSION : 19.7"(W) x 40.8"(H) x 9.5"(D)

00:30


Approx. 30 minutes



Recomm. 2 Person



Tool Required

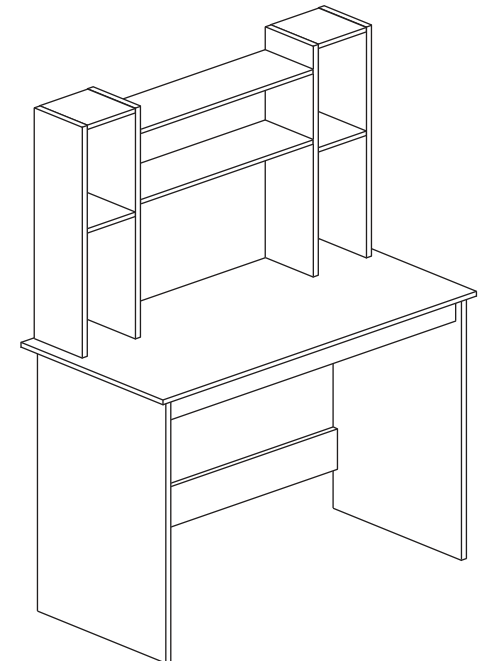








Customer Service












Tel/Fax: 281.500.9372
Toll Free: 773.299.8111 (Mon - Fri 9am - 5pm)
Email: support@furinno.com


www.furinno.com

Find us on
Facebook

Pinterest

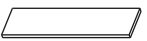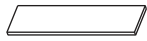No	Hardware List	Qty
1	Hexagon Screw 	8pcs
2	Wood Dowel 	9pcs
3	Cam Lock Screw/Nut 	14pcs
4	Allen Wrench 	1pcs
5	Sticker 	28pcs
6	Screw 	20pcs
7	Shelf Support 	4pcs

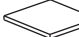No	Parts List	Qty
A	Top Panel 	1pcs
B	Left Side Panel 	1pcs
C	Right Side Panel 	1pcs
D	Front Panel 	1pcs
E	Upper Back Panel 	1pcs
F	Lower Back Panel 	1pcs
G	Upper L/R Side 	2pcs
H	Upper L/R Shelf 	2pcs
I	Upper Top Shelf 	1pcs
J	Upper Center Shelf 	1pcs
K	Upper Small Shelf 	4pcs

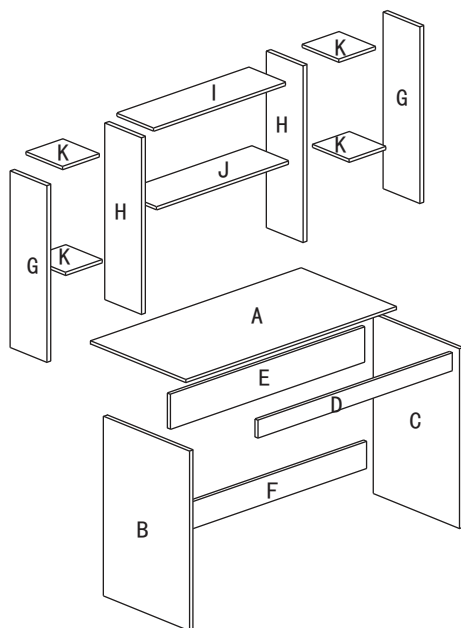


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using incompatible hardware might cause damage to product.


STEP 1

Insert Cam-Lock Screw(3) to Panel (A) (B) (C) and tighten it using screwdriver.

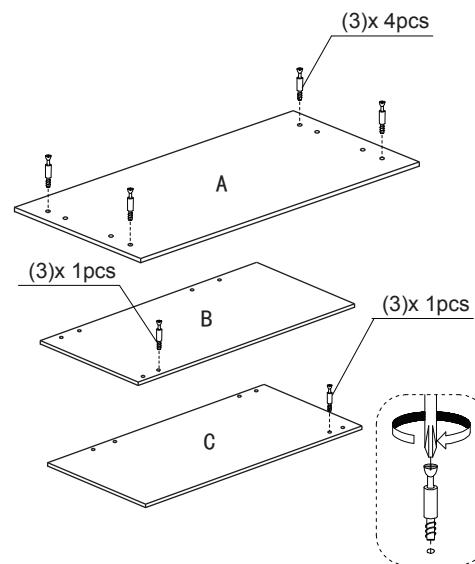


STEP 2

Attach Panel (D), (E), (F) with L/R Side Panel (B), (C) using Hexagon Screw(1), Wood Dowel (2) and Cam Lock Screw/Nut (3).

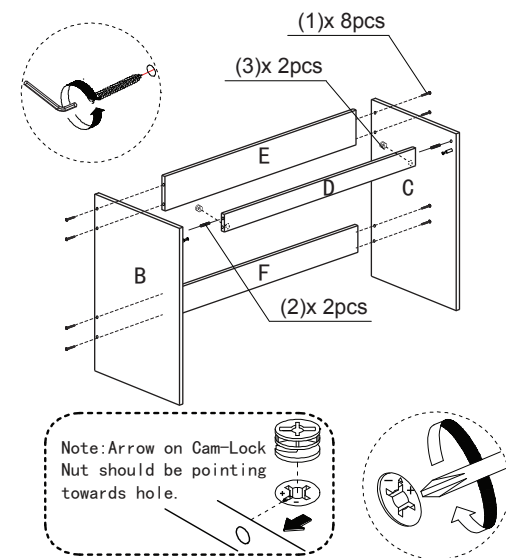

STEP 3

Attach Top Panel(A) with completed unit in Step 2 using Wood Dowel(2) and Cam-Lock Screw/Nut (3).

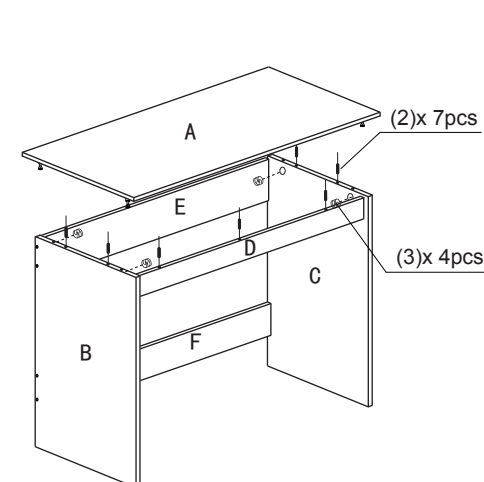

STEP 4

Insert Cam Lock Screw/Nut (3) on Panel (A) using screwdriver.

